

# INFINITY ∞

MODEL RAILWAY CONTROL [and beyond]



Remote Handset Quick Start Guide





## INTRODUCTION

Thank you for purchasing this Gaugemaster Infinity Handset. Please read all instructions carefully and if in doubt, consult the user guide for your system or contact us for additional help. Before attempting any of the following, please ensure the batteries are correctly installed into the Handset.



## WARRANTY

The Gaugemaster Infinity warranty on this product is valid for a period of 12 months from the date of purchase of brand new stock from an official Gaugemaster supplier. This warranty is offered by Gaugemaster Controls Ltd and full details can be found at: [www.gaugemaster.info/InfinityWarranty](http://www.gaugemaster.info/InfinityWarranty) where you can also sign up for a Two Year Extended Warranty on this product if registration is completed within 30 days of purchase.



## PAIRING

To pair your Handset to your Gaugemaster Infinity Base Unit, first plug the power supply for system into your wall socket and connect to your Base Unit via the "PSU" socket. Turn your Handset on using the [O]Key.

Put your Base Unit into "Pair Mode" - press and hold the centre button in the middle of the Base Unit for around 10 seconds until it starts flashing blue. Then:

### **Analogue Users:**

- ∞ Press the "MENU" Smart Key
- ∞ Press the [4] Key for "4 - MORE"
- ∞ Press the [8] Key for "8 - PAIRING"
- ∞ Press the "PAIR" Smart Key

### **Digital Users:**

- ∞ Press the "MENU" Smart Key
- ∞ Press the [3] Key for "3 - MORE"
- ∞ Press the [6] Key for "6 - HANDSET"
- ∞ Press the [2] Key for "2 - PAIRING"
- ∞ Press the "PAIR" Smart Key

The Handset will now look for your Base Unit and pair to it. Once this is done, the flashing blue light will turn solid green and you are ready to go.



# DATA SHARING

The infinity handset comes with a nifty feature to share locomotives and accessories that you have added to your Handset, to another.

**Please Note:** This can only be attempted when both Handsets are connected to the same Base Unit and works for Infinity Digital users only.

## **To Share A Locomotive on the Digital Handset:**

∞ On your original handset press the [MENU] Key followed by [3] For “3 - MORE” to access additional features, then [7] for “7 - Share”.

∞ Press the [1] Key for “1 - LOCO” and use the dial to navigate to the locomotive you wish to copy.

∞ Then, press the “COPY” Smart Key to begin copying.

This locomotive has now been copied to the Base Unit. When another handset is connected to the Base Unit, access the “EDIT LOCO” screen on the additional handset as if you were adding a new locomotive (see page 15 of your Infinity Digital User Manual) and press the “ADD” Smart Key. The locomotive that was just shared will automatically populate the screen so simply press the “SAVE” Smart Key to finish.

## **To Share An Accessory on a Digital Handset:**

∞ On your original handset press the [MENU] Smart Key followed by [3] to access the additional features followed by [7] to share.

∞ Press the [2] Key for “2 - Accessories” and use the dial to navigate to the accessory you wish to copy.

∞ Then, press the “COPY” Smart Key to begin copying.

∞ Access the “EDIT ACCESSORY” screen on the additional handset and press the “ADD” Smart Key. This will take you to a new accessory already populated with the data of the one shared. To finish the process press the “SAVE” Smart Key.

If you have any issues setting your new Handset up, please contact our customer services team on +44 (0) 1903 884321 or by emailing us at [infinitysupport@gaugemaster.co.uk](mailto:infinitysupport@gaugemaster.co.uk)

**Please Note:** It is recommended the batteries are removed from your handset before storing for a prolonged period.

**Bluetooth® Specification:** Low energy ISM Band 2.402 to 2.480 GHz with 50m range.


Always store your system in warm dry conditions. Power Supplies and Base Units are for indoor use only. Never let any part of your system get wet. There are no serviceable parts inside and if any part becomes damaged seek professional advice or replace the item before use.


This product is not a toy and contains small parts which may harm or choke a child. Not recommended for children under 14 years old unless supervised by an adult.

Gaugemaster House, Ford Road, Arundel,  
West Sussex, BN18 0BN, United Kingdom  
+44 (0) 1903 884321

 @gaugemaster

 @gaugemaster

 @gaugemaster\_controls

 @gaugemaster\_controls

The *Bluetooth®* word mark and logos are trademarks of Bluetooth SIG, Inc. Any and all uses of such mark by Gaugemaster Controls Ltd., are used under licence.

14+



UK  
CA



Instruction Version: 2.01  
Published: 10/2024. E&OE

[www.gaugemaster.com](http://www.gaugemaster.com)