

Switch Wiring Diagram – FM6910

Key:

- White (A) = 16v AC Transformer
- Black (B) = 16v AC Transformer
- Red = Turntable (Switch Wire)
- Grey = Turntable (Switch Wire)
- Yellow = Turntable (Common)
- Yellow (C1) = Turntable Bridge (+)
- Yellow (C2) = Turntable Bridge (-)

DC Control

If you are wiring the Switch to a DC Turntable the two yellow wires (**C1 + C2**) can be connected to a separate controller to control the bed under a different supply.

AC Control

If you are using this switch for the AC Turntable, Connect the two Yellow Wires (**C1 + C2**) together and attach them to one side of the track output and connect the White (**D**) wire to the other side of the track output.

Fig. 3

