


# GAUGEMASTER Scenic Sounds Module

The Scenic Sounds range of modules provide authentic sound effects for any gauge layout. The module can be powered either from 8-16 volts smooth DC (inc a 9V battery) or from DCC where accessory commands can also control the sounds. By default on DCC and DC the individual sounds are played over the continuous background in a preset natural sequence and there are several variations of some of the sounds which are played randomly. When powered by DCC each sound can be triggered by a DCC accessory command or removed from the Playlist. On DC each sound can be played by pressing the button (good as a test mode) or can replay a selection already set up using DCC.

A Joint Project  
Between

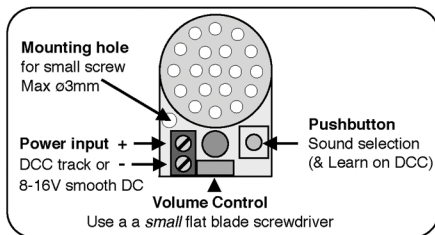

## GM783 Urban Scenic Sounds Module

No	Sound	Playlist control	Default DCC address
1	Background Urban sound	Played in a seamless continuous loop - can be turned off using DCC	81
2	Aircraft coming overhead	Can be removed from the playlist or played on demand using DCC	82
3	Bin Lorry / Dustcart	Can be removed from the playlist or played on demand using DCC	83
4	Pelican crossing	Can be removed from the playlist or played on demand using DCC	84
5	Pneumatic drill - roadworks	Can be removed from the playlist or played on demand using DCC	85
6	Police car siren	Can be removed from the playlist or played on demand using DCC	86
7	Shop / house burglar alarm	Can be removed from the playlist or played on demand using DCC	87
8	Car horns	Can be removed from the playlist or played on demand using DCC	88

# GAUGEMASTER Scenic Sounds Module

### How to change the Sound Accessory addresses

The Accessory address for each sound can be changed from the default address to a new address. This is useful if an address is already in use, or if you want to play a particular sound when some other DCC accessory (such as a point or signal) changes - you can do this easily by giving a sound the same DCC address as the accessory you want to pair up with.

Start by selecting the sound number you want to change by pressing the Learn button - each time you press the button the red LED flashes several times corresponding to the sound, so one flash is sound 1, two flashes sound 2 etc.

Now set your controller to the DCC accessory address you want to control that sound from and send a command. The LED should stop flashing and the sound you selected will now be played each time that command is used, or you can turn off the sound from the natural sequence using the opposite command at the same address.

### How to Reset the Scenic Sounds module using DCC

To reset all sounds to factory reset conditions, press and hold the button for at least 10 seconds. When it says "Factory Reset" the module has reset to play all sounds and restored all DCC settings back to the original Default DCC addresses.

### Using Scenic Sounds on 8-16 volts smooth DC or a 9 volt battery

The Scenic sounds module power terminals should be wired to a 9V battery or 8-16 volts smooth DC supply. Note that output terminals from a basic transformer type controller rarely give smooth DC and will result in 'hum' and improper operation. Use a smooth DC supply.

For normal operation connect the positive + wire to the screw terminal nearest the speaker and connect the negative - wire to the terminal nearest the edge. This will play the background sound and then other sounds in their Playlist sequence as per the list above.

### Demonstration and test mode

In addition to the Playlist sequence you can play individual sounds in order by pressing the button - ideal for demonstration and testing.

### Customising the Playlist of sounds

If you have access to a DCC controller from a friend or club, you can set your module up to stop some sounds playing - details of how to do this are shown in the DCC section above. Once setup using DCC you can then reconnect it to smooth DC again, but this time connect the power wires the opposite way around, negative to the terminal nearest the speaker and positive to the terminal nearest to the edge.

The Playlist will now play without the sounds which you turned off. You can reset the module to factory default using DCC as above.

### Caution

- Never apply more than 16 volts DCC or smooth DC to the module - the GMC-WM4 smooth DC regulated power unit is ideal
- Scenic Sounds modules get warm in use - this is normal. Scenic Sounds modules are not waterproof - keep them dry!
- Be careful not to allow stray wires touch anything other than the power terminals

*This item is not recommended for children under 14 unless supervised by an adult.*